


Cup hook holes 4" from top to allow clearance to remove handset

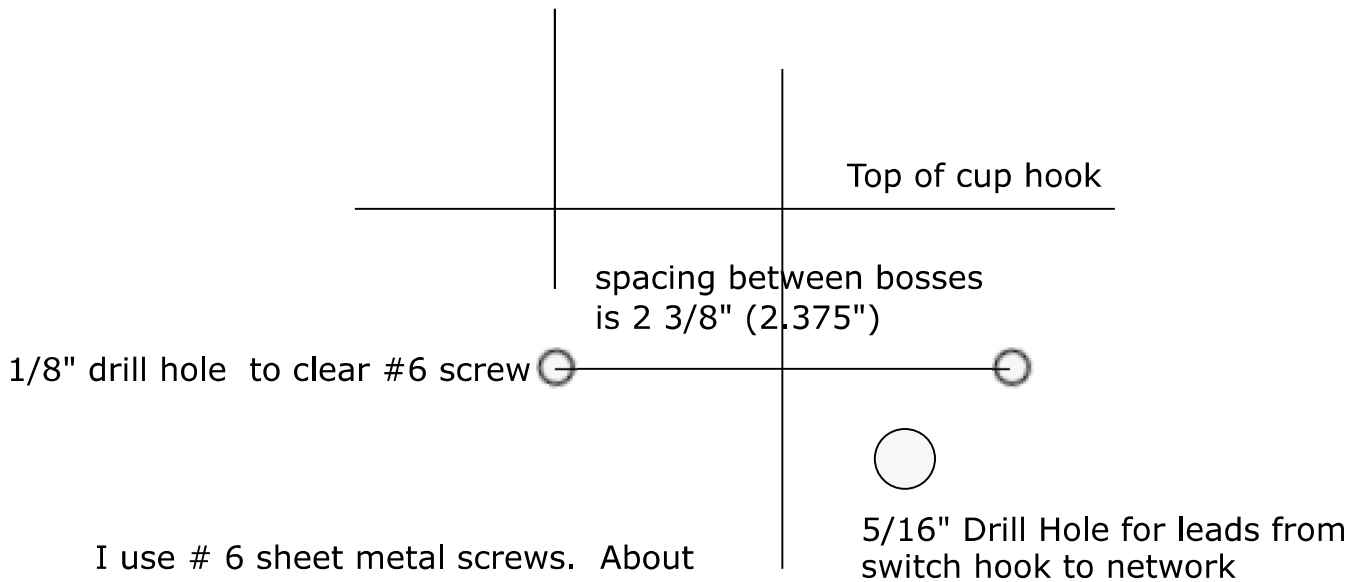

I use # 6 sheet metal screws. About 1/2" goes into the bosses in the cup hook. So for 1/2" plywood, I use a 1" screw. Adjust as needed for your fascia material.

NOTE: paper is not dimensionally stable and some printers and copiers shrink or expand when printing so check dimensions before drilling!



5/16" Drill Hole for Handset Cord,
Off to side so cord won't interfere
with handset hanging up